

**NEC NEAX 1000 OR 2000**  
**SYSTEM CLOCK PROGRAMMING**

**Changes must be performed from the attendant console:**

- *Depress a loop key (with console idle)*
- *Dial the programming feature access code*
- *OR*
- *Depress the feature key programmed as PROG*
- *Dial the programming password (default password is 12345678)*
- *Depress the CLOCK key*
- *Dial the new date and time (12 digits) in the following order: MT Month (01-12); DD Date (01-31); DW Day of Week (00-06 = Sun through Sat); HH Hour (00-23); MM Minutes (00-59); SS Seconds (00-59)*
- *Depress the ANS key to enter the new time and date*
- *Depress CANCL to return to the program prompt (allows programming other options)*
- *OR*
- *Depress the RLS key to return to the idle mode*